


Installation Instructions

Peditred LP G3 with No Frame

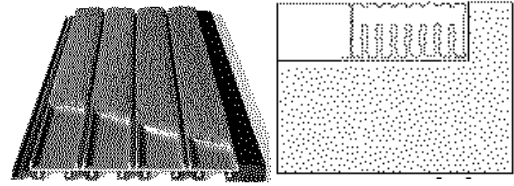

1). Site Prep

- Use wood forms to prepare a recess in the concrete a minimum 1/2" depth to final finished floor surface.
- After concrete has cured, remove the wood forms. (See Illustration A) below
- Clean the concrete recess to remove all dirt, oily films, and debris.


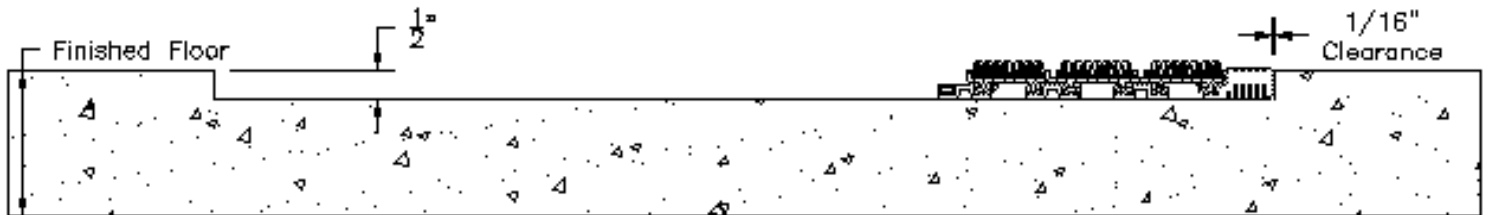


Illustration A

2.) Attaching Modules (If Necessary).

- Attach modules 1,2, and 3 (example) together as shown below utilizing a rubber mallet. When possible modules can be staggered and slid together.
- Depending on the size of the Peditred LP, there may be multiple modules needed to make one complete unit. These modules must be joined together as shown in illustration B.
- It is important that the aluminum is properly seated into the connector as not to damage them, If damaged contact the factory.

Illustration B

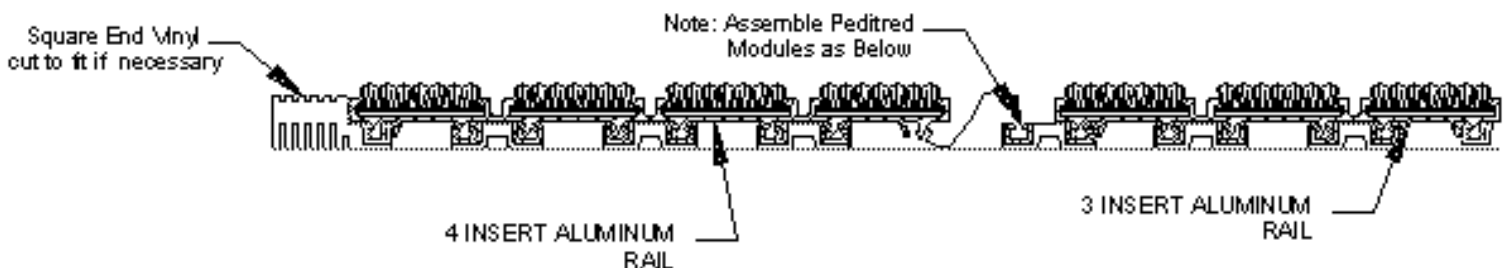

3.) Module Alignment for Large Grids Over 144" Wide

- Trial fit assembly into frame area – trim end vinyl as required with a utility knife for proper fit.

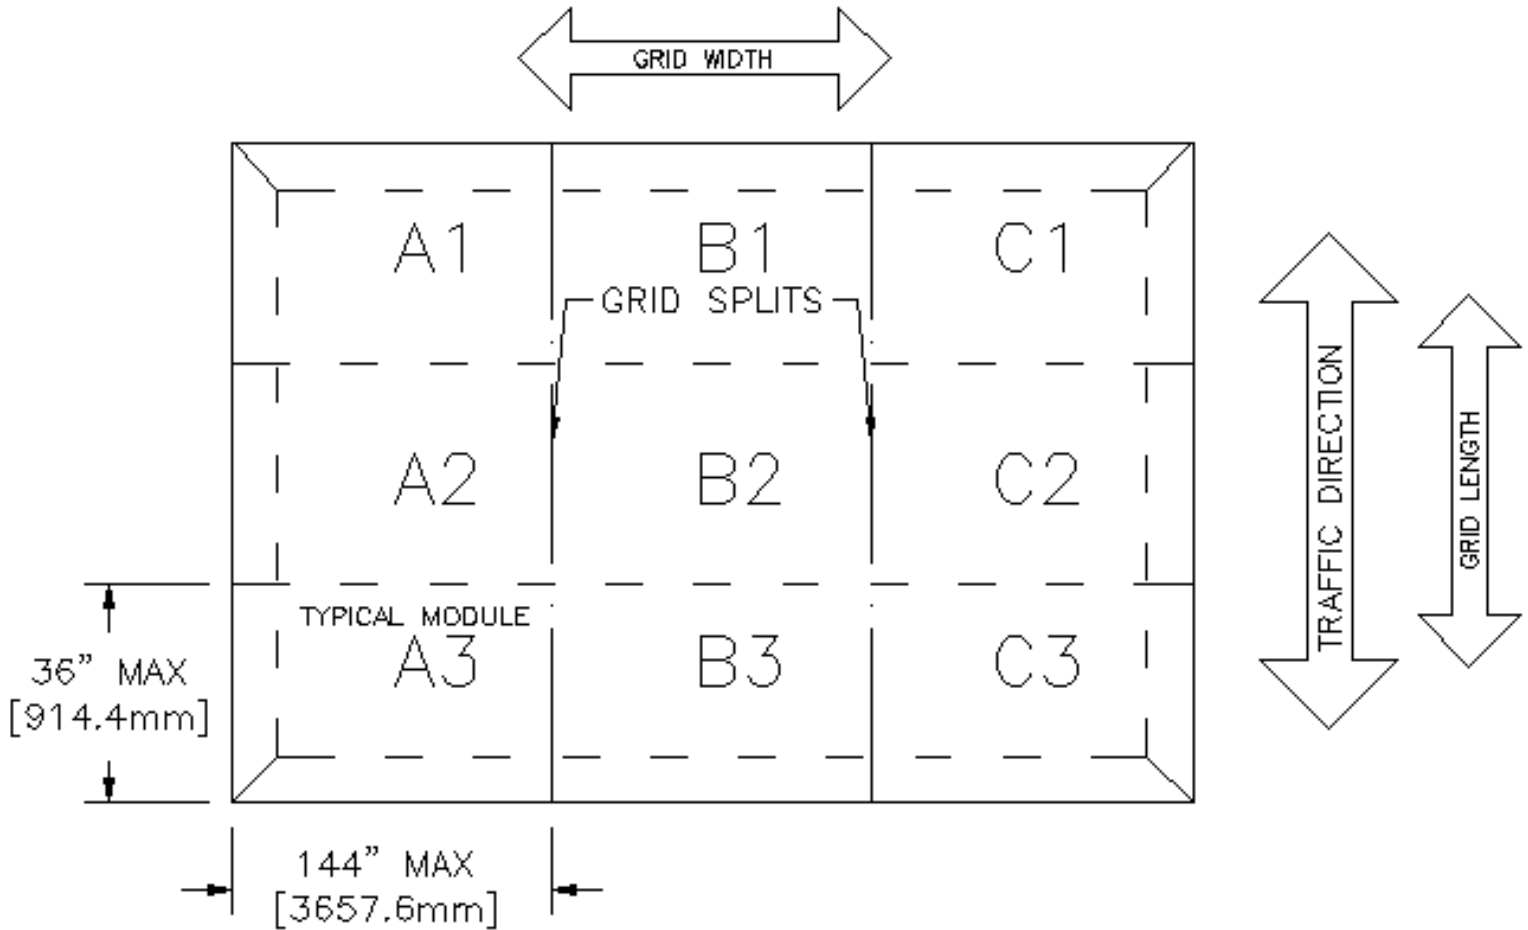


Illustration C

4.) Completion

It is necessary to cover the installation with 3/4" plywood until all additional project work is completed. This will protect the Peditred LP from potential abuse during the construction phase. Damage occurring from inadequate protection during this phase may void the manufacturer's warranty.

5.) Cleaning and Maintenance Instructions for Pedisystems Products.

- Manufacturer's suggested safe rolling load for the Peditred LP G3 is 750# per wheel
- Heavy loads beyond this weight may damage the units, contributing to their premature failure or creating a tripping hazard.
- Vacuum surface regularly with beater brush attachment to allow contact with various surfaces of entrance flooring.
- Before deep cleaning the surface, roll unit back to remove dirt collected underneath as needed. Dirt should be removed with professional vacuum cleaner and should not be allowed to build up to the point where a level mat surface is affected.
- Deep clean quarterly, either by removing unit to an area where it can be cleaned with a powerwasher (on light setting to avoid carpet damage) or.
- Shampoo the unit in place (soap/water extraction)
 - It is recommended that shampooing take place overnight to allow carpet fibers to dry thoroughly before heavy traffic resumes.
 - Suggestions for pre-treating the area prior to shampooing
 - Remove gum or other sticky substance by applying a commercial freeze spray to the affected area. This should allow the residue to break off easily.
 - For ground-in dirt showing in high traffic areas, add one cup of bleach per gallon of warm water and use stiff brush to pre-treat carpet fibers.
 - If aluminum needs cleaned, use stiff nylon bristle brush to clean with shampoo mixture prior to shampooing entire unit.
 - To achieve the most effective suction of the shampooer, run the wand perpendicular to the rails and not along the length of the carpet strips.
- Take care when mopping surrounding floor area. Keep mop away from mat or grid. The aggressive texture of the carpet inserts may grab lint when the mop comes in contact, potentially causing unsightly lint collection at edges of unit.

Replacement inserts are available: See www.pedisystems.com or call 1-570-546-5941 for more information and for contact information for your local representative.



Construction Specialties™

www.c-sgroup.com

U.S.A. 800-233-8493

Canada 888-895-8955